

PARTS LIST

for



30" ELECTRIC SET-IN SELF CLEAN OVEN

**MODEL
RS675PXK-0**




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



Whirlpool CORPORATION
Benton Harbor, Michigan.

OVEN PARTS

For Model: RS675PXX-0

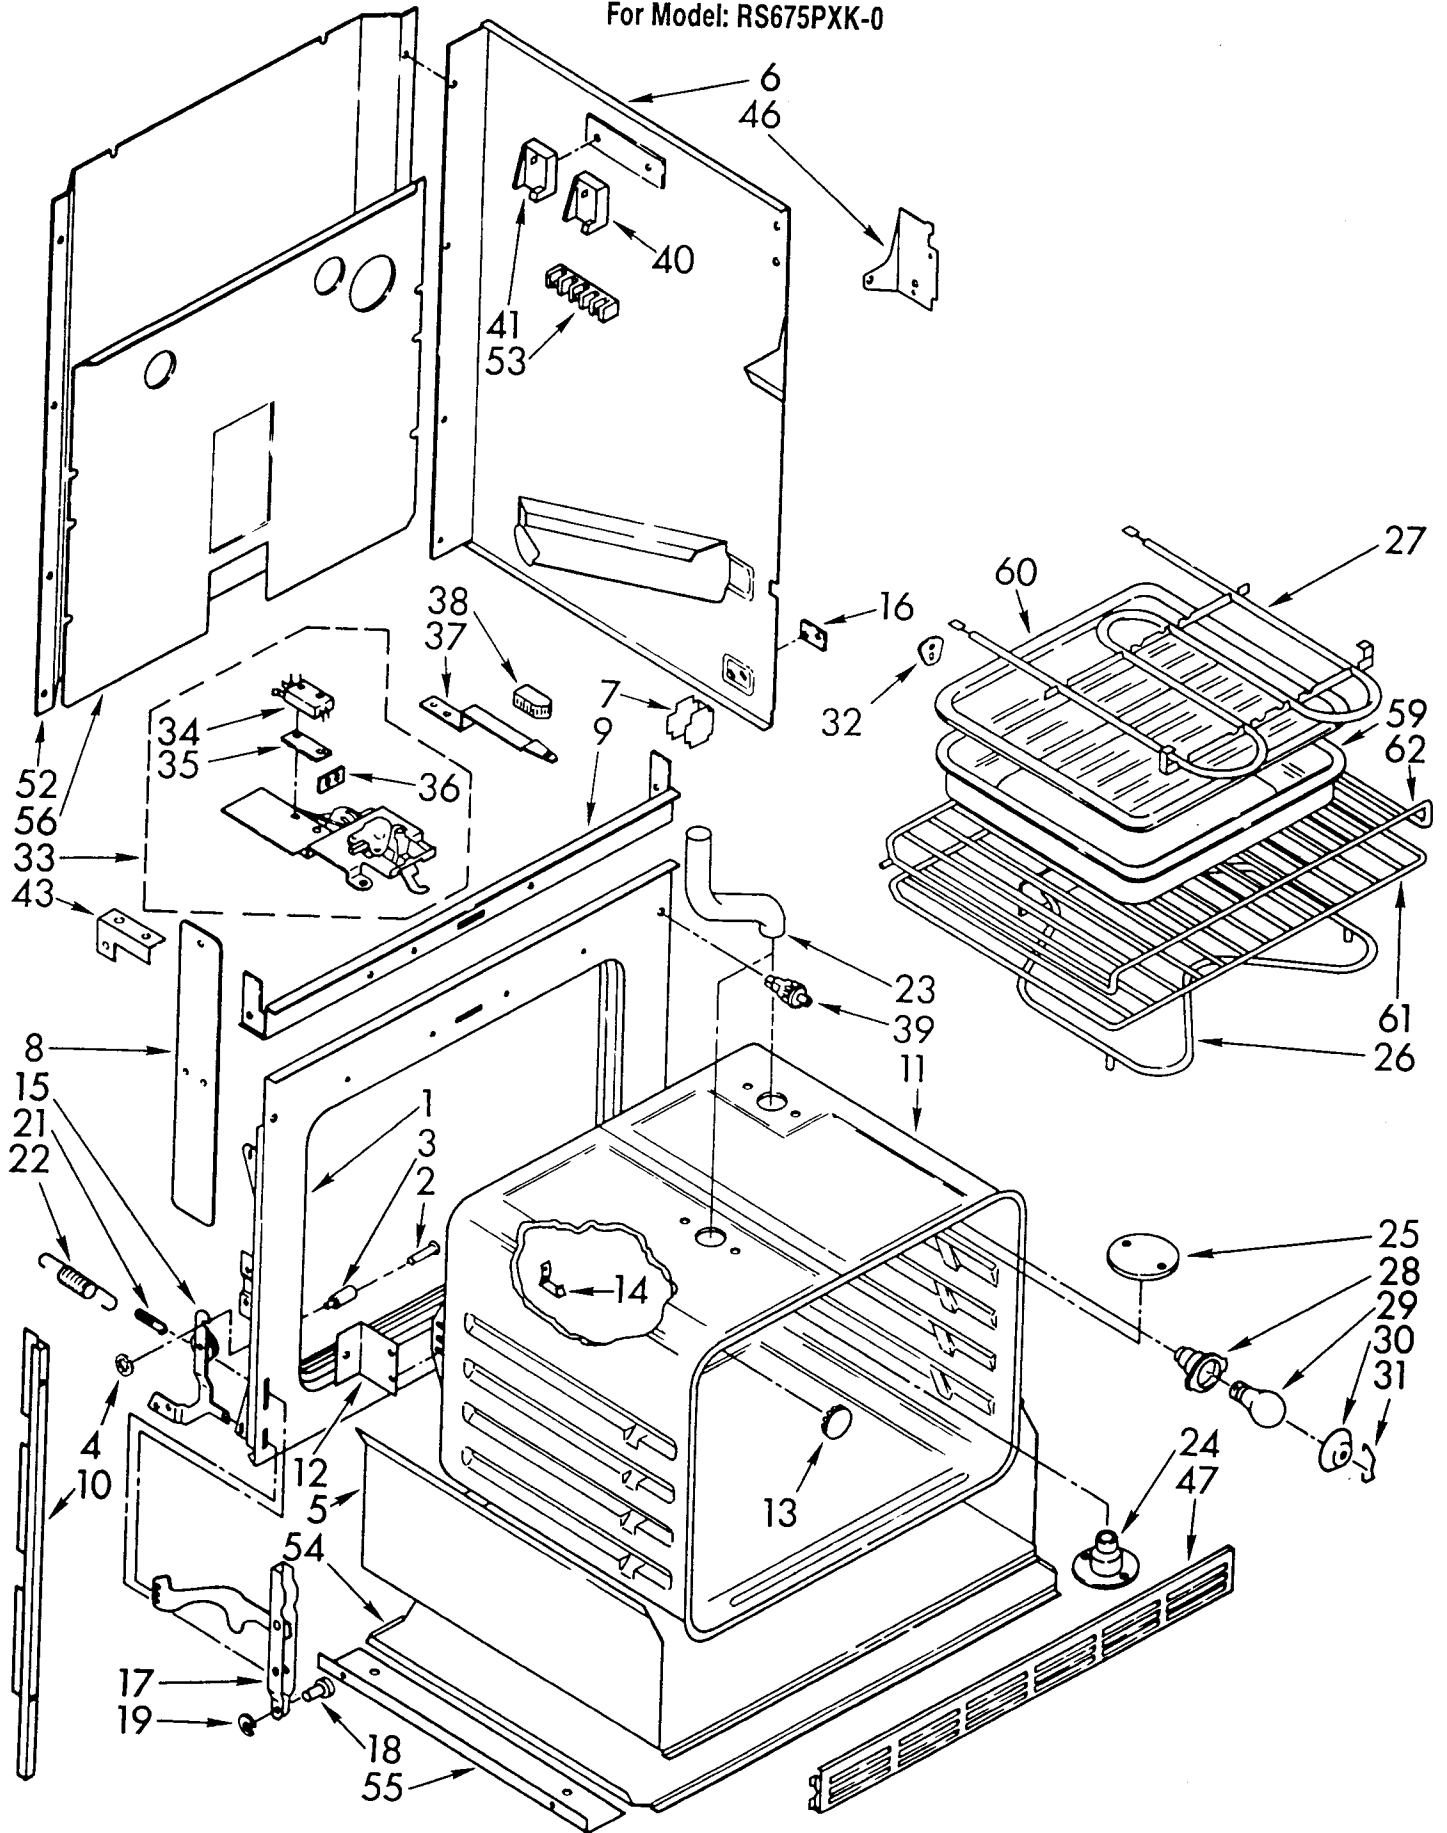

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


NOTE: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	328747	Front Frame
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	310770	Insulation Tray
6	311006	Side Wrapper R.H.
	311009	Side Wrapper L.H.
	313638	Screw, 8 - 18 x .5 (14)
7	311774	Support, Side Wrapper (4)
	313638	Screw, 8 - 18 x .50 (4)
8	311256	Insulation Baffle (2)
	308536	Screw, 6A x 1-1/4 (2)
9	310693	Baffle, Top Insulation
	313638	Screw, 8 - 18 x .50 (4)
10	310685	Side Trim L.H.
	310689	Side Trim R.H.
	313638	Screw, 8 - 18 x .50 (8)
11	328756	Oven (30" Pyro)
	311056	Screw (3)
12	310713	Bracket, Oven Mounting (2)
	246127	Screw, 10-32 x 5/8 (6)
13	257314	Plug Button
14	313382	Clip, Therm Bulb (2)
15	328801	Hinge Ear R.H.
	328802	Hinge Ear L.H.
16	310659	Plate (Side Panel) (2)
	308544	Screw, 10-24 x 1/2 (4)
17	329713	Channel Arm (2)
18	307986	Pin, Hinge (2)
19	307594	Ring, Retainer (2)
21	308125	Anchor, Spring (2)
22	308126	Spring, Oven Door (2)
23	310835	Tube, Vent Extension
	343641	Screw, 10-16 x 1/2
24	310839	Smoke Eliminator
	313638	Screw, 8 - 18 x .50 (2)
25	310662	Plate, Cover
	313638	Screw, 8 - 18 x .50 (2)
26	661170	Unit, Bake
		308180 (Alt.)
		313827 (Alt.)
	246127	Screw, 10-32 x 5/8 (2)
27	660579	Unit, Broil
		311714 (Alt.)
		311713 (Alt.) (Includes Illus. 32)
	246127	Screw, 10-32 x 5/8 (4)
28	660556	Socket, Oven Light
		307856 (Alt.)
		310208 (Alt.)
	308043	Screw, 10-12 x 7/8 (2)
29	311255	Bulb, Oven Light
30	308039	Cover, Oven Light
31	308038	Retainer, Oven Light
32	311982	Coverplate

33	328585	Latch Assembly
	313638	Screw, 8 - 18 x .50 (2)
	311056	Screw (2)
34	308185	Safety Switch
	98106	Screw (2)
35	309245	Insulator, Switch
36	313035	Terminal, Shield
	309258	screw, 6 x 3/8B (2)
	311932	Screw, 6-32 x 1/4 (2)
37	310825	Latch Handle
	308422	Screw, 10-24 x 1/2 (2)
38	311253	Knob, Latch Handle
	246135	Screw, 8 x 5/16
39	310345	Switch, Door
40	314209	Switch, Percentage Broil
41	314211	Switch, Percentage Bake
	314215	Screw, #6
43	312320	Shield, Insulation
	307748	Screw, 10A x 1/2
46		Cover Side
	310714	L.H.
	310715	R.H.
	313638	Screw, 8 18 x .50 (6)
47	310668	Bottom Grill
	309029	Screw, 8-15 x 1/2 (3)
52	310459	Back Panel
	313638	Screw, 8 - 18 x .50 (6)
53	258076	Terminal Block
	112432	Nut (3)
	308043	Screw, 10-12 x 7/8 (2)
54	310458	Cover, Bottom
55	311592	Angle, Support (2)
	313638	Screw, 8 - 18 x .50 (4)
56	311012	Cover, Rear
	313638	Screw, 8 - 18 x .50 (12)
59	310976	Pan, Broiler
60	258171	Grid, Broiler Pan
61	308173	Rack, Oven
62	308172	Rack, Oven Offset

CONTROL PANEL PARTS

For Model: RS675P XK-0

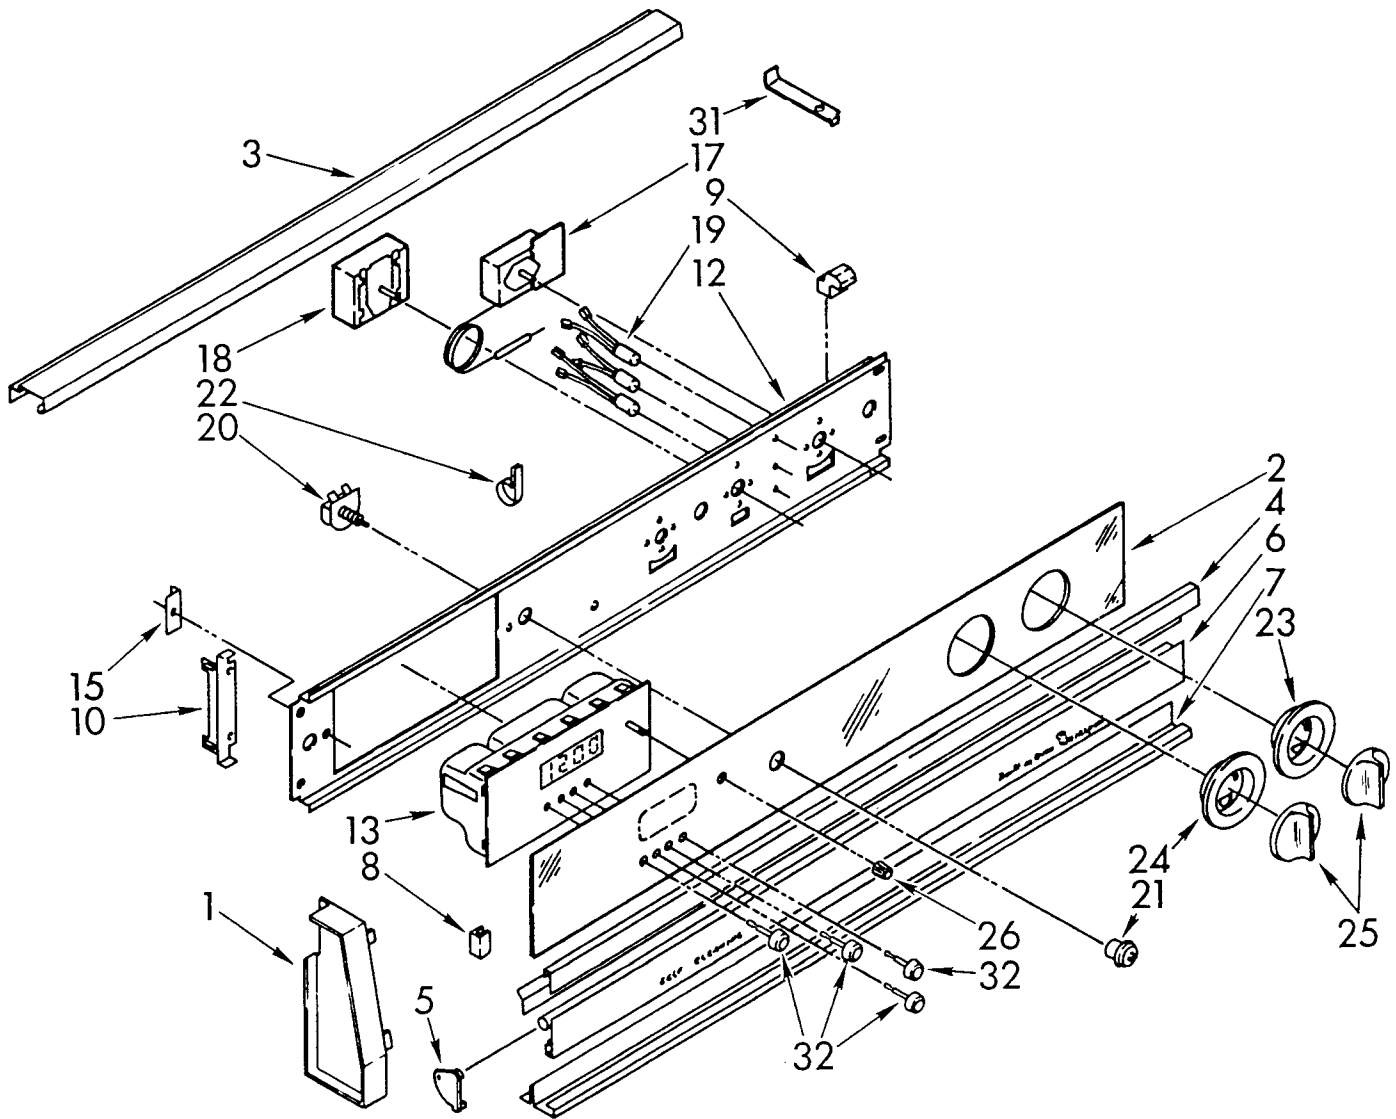


Note: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	310826	End Cap. L.H.
	310827	End Cap R.H.
	342043	Screw (2)
	308504	Screw (2)
2	313947	Control Panel, Glass
3	310819	Rail, Top
4	311189	Trim, Center
5	310833	End Trim, Vent Door R.H.
	310832	End Trim, Vent Door L.H.
6	312447	Door, Vent
7	311190	Trim, Bottom
	342043	Screw (6)
8	310842	Channel, Rubber (2)
9	310823	Retainer, Glass (4)
10	310720	Bracket, Control Panel (2)
	98520	Screw (4)
12	313863	Bracket, Control
13	314128	Timer, Orbitron (Included #14)
	246132	Screw, 8A x 3/8 (2)
15	313864	Bracket, Timer (2)
17	313856	Thermostat, Oven
	487384	Screw, 6-32 x 1/4 (2)
18	310006	Selector Switch
	155023	Screw, 8-32 x 1/4 (2)
19	311802	Light Indicator Oven, Lock & Clean (3)
20	312581	Switch, Oven Light
	312796	Washer
	246132	Screw, 8A x 3/8 (4)
21	313030	Bezel Switch
22	308605	Strain Relief
	246132	Screw, 8A x 3/8
23	311066	Escutcheon, Thermostat
24	311068	Escutcheon, Selector Switch
	254225	Screw, 8BT x 1/4 (2)
25	310834	Knob, Control (2)
26	313523	Knob, Timer (1)
31	312752	Support, Rail
	246132	Screw, 8A x 3/8
32	313958	Knob-Bit Generator (4)

DOOR PARTS

For Model: RS675P XK-0

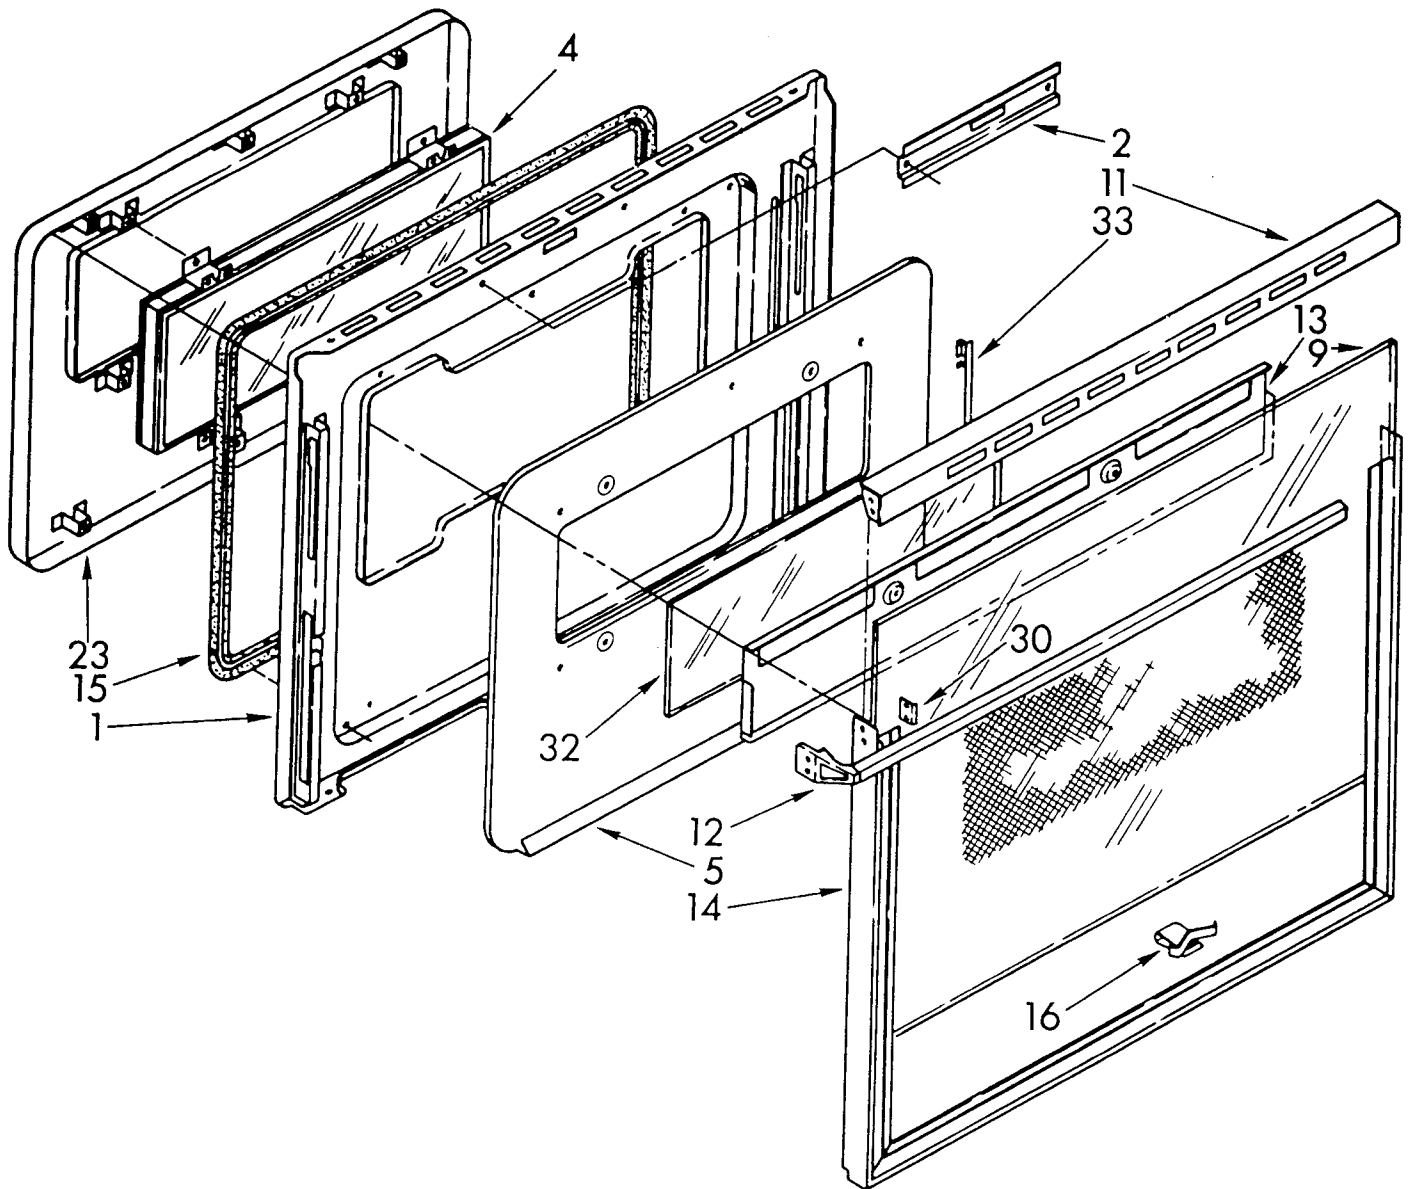


Note: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	329694	Liner, Door
	307748	Screw, 10A x 1/2 (9)
	311056	Screw (2)
2	308033	Channel, Latch
	311054	Screw (2)
4	330038	Window Package
	307748	Screw, 10A x 1/2 (4)
5	308021	Insulation Retainer
	307748	Screw, 10A x 1/2 (8)
9	309069	Glass, Outer
11	310428	Frame, Door Top
12	312721	Handle, Oven Door
	308541	Screw, 8 x 7/8 (4)
	355515	Screw, 8 x 7/8 (4)
13	309056	Baffle, Heat
	90296	Clip (2)
14	310427	Frame, Door
	307748	Screw, Black 10A x 1/2 (2)
15	311904	Seal, Fiberglass
16	310706	Clip, Glass (10)
23	327898	Panel, Inner
30	311506	Clip (2)
32	309842	Glass (6.81" x 18.31")
33	309843	Retainer, Glass (2)

WIRING HARNESS PARTS

For Model: RS675P XK-0

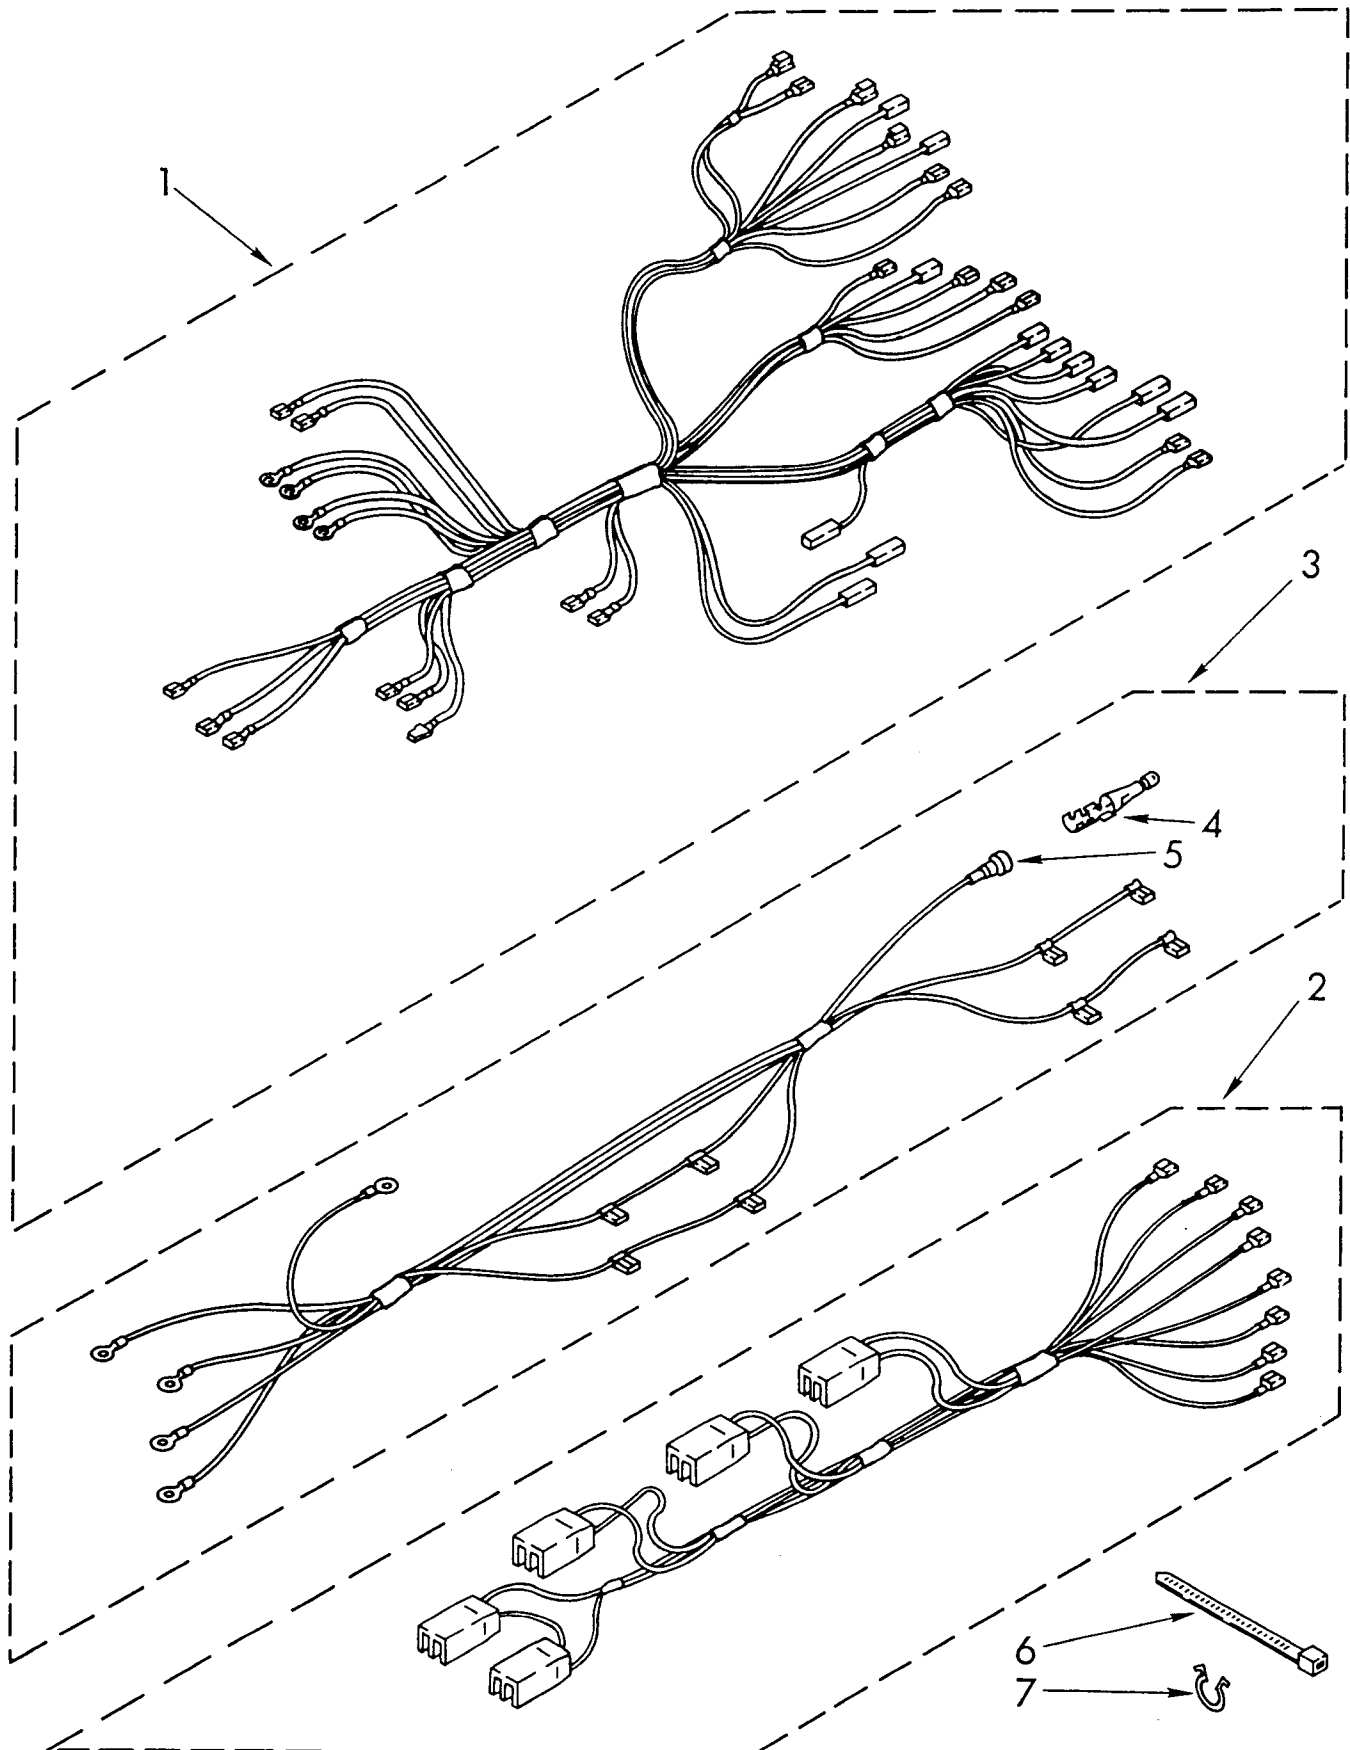

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

884247

1	313867	Harness, Wire (Main)
2	3147828	Harness, Wire (surface Unit)
3	313464	Harness, Wire (Infinite Switch)
4	94613	Terminal
5	351297	Block, Disconnect
6	309330	Tie, Cable
7	313438	Clip, Harness (2)

OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~C
242820	Wire, Black 14 Ga. 150~C
242821	Wire, Blue 14 Ga. 150~C
242822	Wire, Brown 14 Ga. 150~C
242830	Wire, Brown 14 Ga. 200~C
242823	Wire, Green 14 Ga. 150~C
242824	Wire, Orange 14 Ga. 150~C
242829	Wire, Red 12 Ga. 150~C
242825	Wire, Red 14 Ga. 150~C
242831	Wire, Red 14 Ga. 200~C
242826	Wire, White 14 Ga. 150~C
242827	Wire, Yellow 14 Ga. 150~C
242832	Wire, Yellow 14 Ga. 200~C

REFINISHING MATERIAL

261810	Touch-Up Self-Clean (1/2 Pt.)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25")

ACCESSORY PARTS


261825	Console
261881	Rotisserie Kit

LITERATURE PARTS

LIT3147842	Tech Sheet
LIT311433	Instructions, Installation
LIT313300	Guide, Use & Care
LIT313358	Book, Cooking Guide
LIT884247	List, Repair Parts

COOKTOP PARTS

For Model: RS675PXX-0

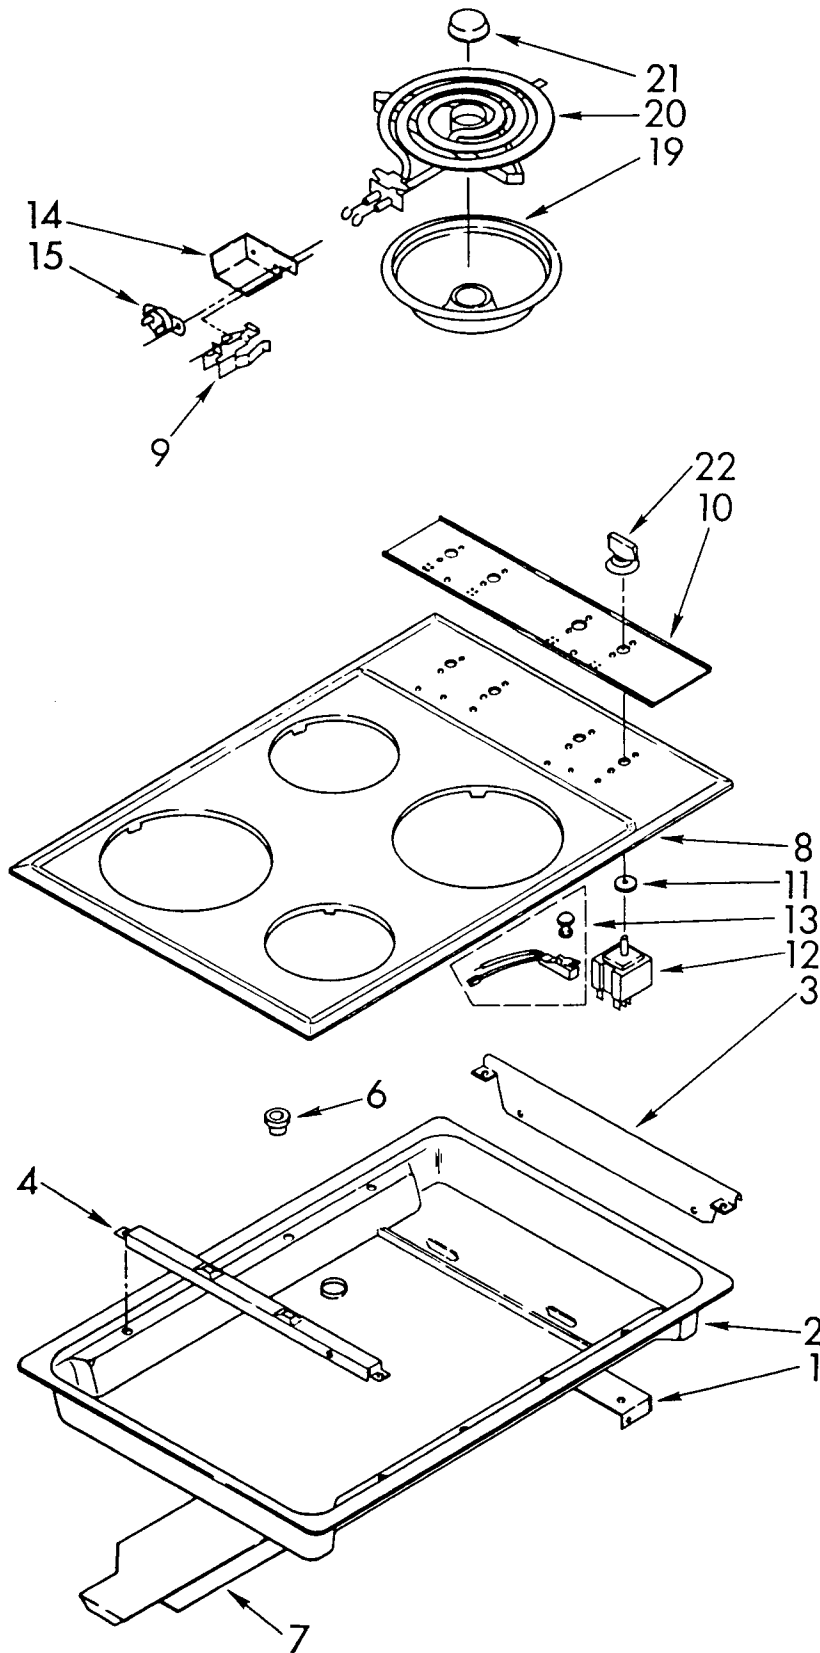

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	310718	Support, Burner Box (2)
	313638	Screw, 8 - 18 x .50 (6)
2	311019	Burner Box
	313638	Screw, 8 - 18 x .50 (4)
3	310716	Shield, Switch
	313638	Screw, 8 - 18 x .50 (2)
4	310717	Support, Cooktop
	313638	Screw, 8 - 18 x .50 (2)
	313638	Screw, 8 - 18 x .50 (4)
6	258109	Bushing
7	3147565	Cover, Top Rear
	313638	Screw, 8 - 18 x .50 (3)
8	307492	Cooktop, Brushed Chrome
	166681	Screw, 10-32 x 5/16 (2)
	312318	Screw, 10-32 x 1/2 (4)
9	3147829	Clip, Receptacle (4)
	313808	Screw, 6-32 x 1/4 (4)
10	313132	Panel, Control
11	309839	Seal, Switch
12		Switch, Infinite (4)
	311837	Use W/6" Surface Unit (2)
	311836	Use W/8" Surface Unit (2)
	311865	Screw, 8-32 x 5/16 (8)
13	313461	Indicator Light (Lens, #313602)
14	3147830	Bracket, Sensor
15	3147833	Thermostat
	313808	Screw, 6-32 x 1/4 (3)
19		Reflector Pan
	308539	6" (2)
	308540	8" (2)
20	660532	Unit, Surface (6")
		313964 (Alt.)
		309334 (Alt.)
	660533	Unit, Surface (8")
		313963 (Alt.)
		309340 (Alt.) (Includes Illus. 21)
21	309195	Medallion, Surface Unit
22	330190	Knob, Control (4)